Instructions, 3x4 Control Board Upgrade Kit

Extend Holding Bin EHB Series

Kit # 540-1476S Parts List



1x Side Panel with Firmware #:

93-266, 540-1472S (U.S.)

93-268, 540-1474S (Canada)



Cable Ties

(3x)




USB Drive (1x)

Tools Required





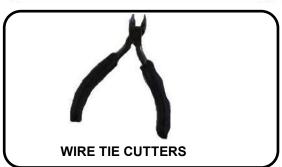


For qualified service personnel only.

Use only the specified tools to perform the enclosed operation.

Do not cut, solder or modify any wires or any components of the kit.

Contact local authorities regarding the disposal of electrical and electronic components.

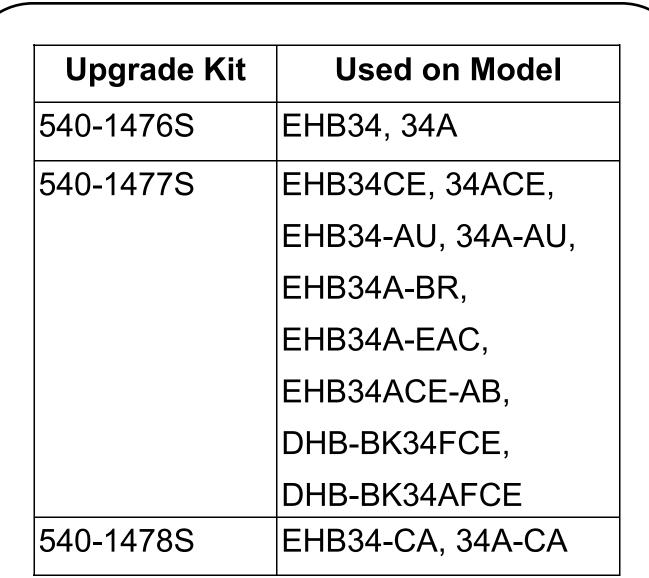


- Flip the power switch **OFF** "**O**", and **unplug the power cord** from the outlet.
- Use a Phillips screwdriver to remove all screws from top cover. Keep screws for re-assembly later.



Remove the side panels then top cover, and put aside.




Remove the encircled connections from the boards currently in the unit.

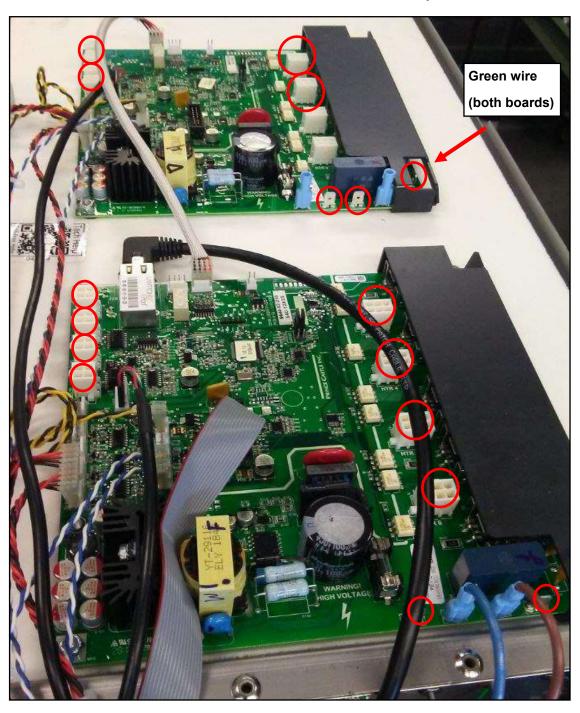




Cut the zip tie at the topmost zip tie along tan wires.

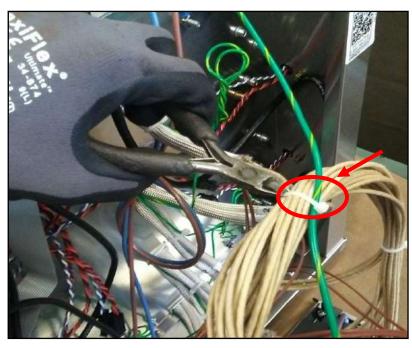


*If a wire is cut or damaged, DO NOT attempt repair. Please call Prince Castle tech. support 800-722-7853.


Cut any remaining zip ties on the tan wire bundle. Put aside the **brown** and **blue** wires that are **not connected** to anything.

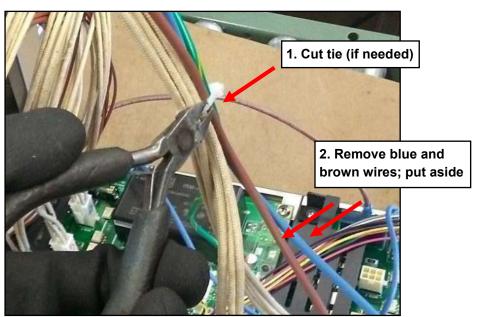

Connect the tan heater wires "3" through "6" to the big side panel board as shown.

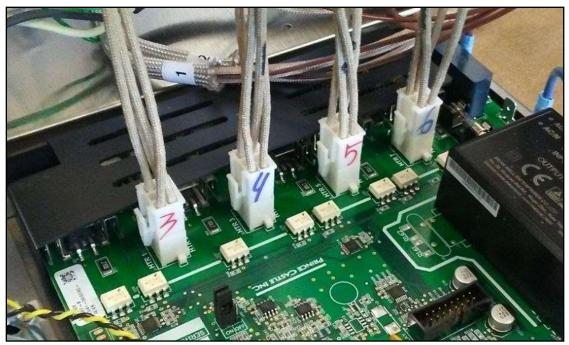


Cut the zip tie joining the **brown** thermocouple wires "3" through "6"; then connect them to the **big side panel board** in the ports shown.

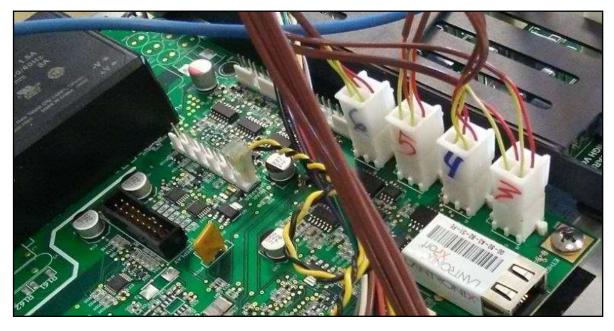

9 Connect the tan heater wires "1" and "2" to the small side panel board as shown.





Repeat for the **brown** thermocouple wires "1" and "2" as shown.

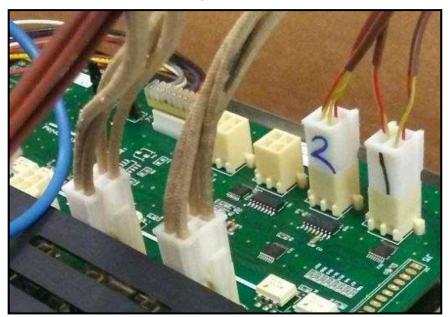

Connect the **long green wire** on the sheet metal cavity to the ground pin of the **big side panel board**.



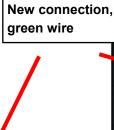

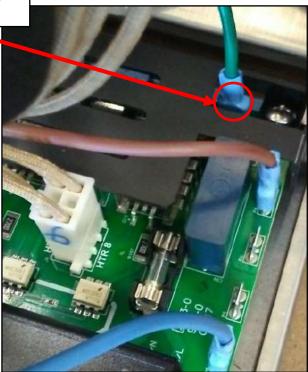


Use an 11/32 nut driver to remove the short green wire next to the one from the previous step.



13A


Use a cable tie from the kit to bundle the tan and brown wires labeled "1" and "2" to the **black USB cable** connected to the **far board on top**.

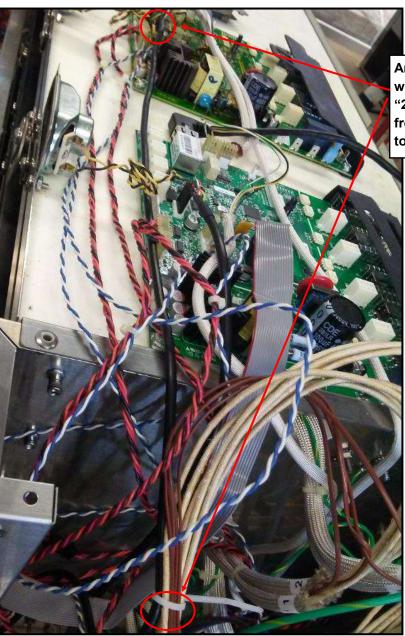

Anchor tan and brown wires labeled "1" and "2" to cable running from "BOARD 2" slot to far board on top.

13B


Carefully tuck the tan and brown wires labeled "3" through "6" into the side cavity corner as shown.

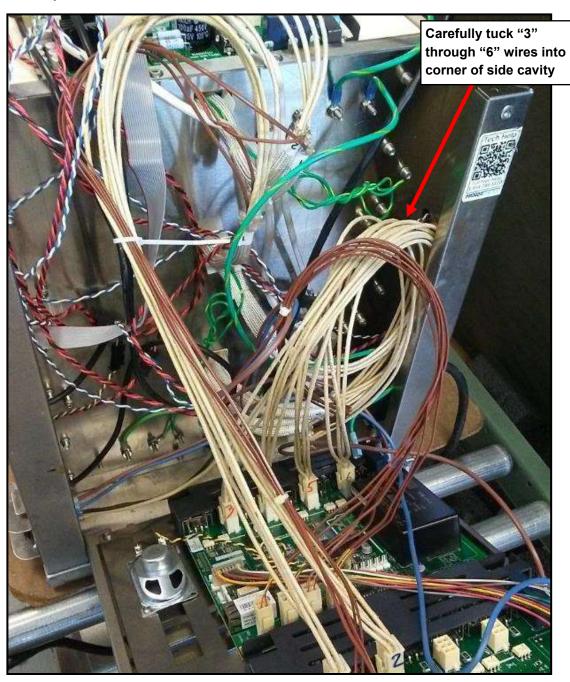


Disconnect the **USB** cable from the closer board on top, and connect to the pins labeled "**USB**" on the big side panel board.

Closer USB wire to big side panel board

IMPORTANT: Note orientation of connector shown; red wire facing toward center of board

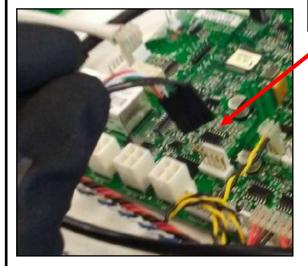

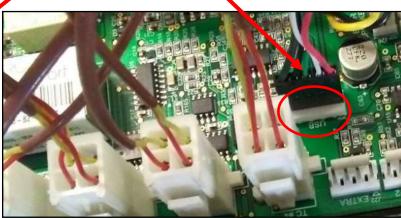


Disconnect the **RJ45 cable** from the closer board on top, and connect to the pins labeled **white Lantronix port** on the **big side panel board**.






RJ45 cable to big side panel board


Disconnect the **ribbon cable** from the closer board on top, and connect to the ribbon cable port on the **big side panel board**.

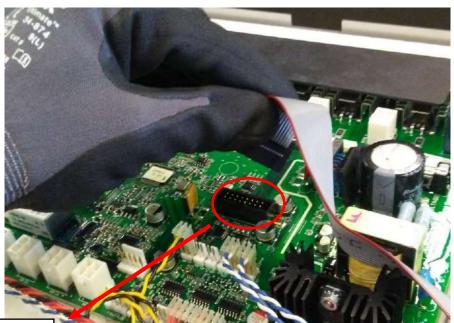


Ribbon cable to big side panel board

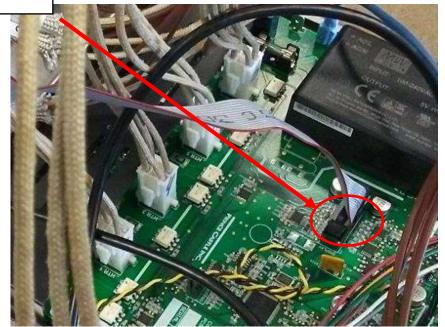


From the **far board on top**, disconnect the red/orange and blue/white braided wires from pin "AUX1"/"A1". Then connect to "AUX2"/"A2" on the **big side panel**

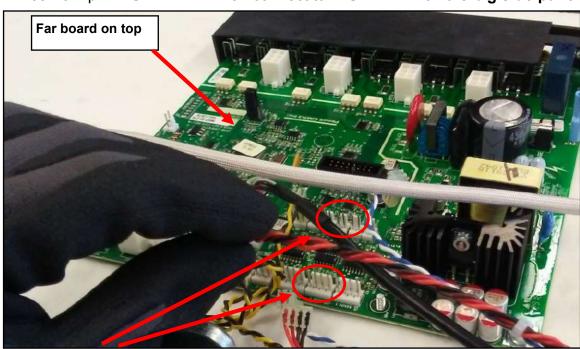


Top board: "AUX1"/"A1"
=> Big side panel board: "AUX2"/"A2"

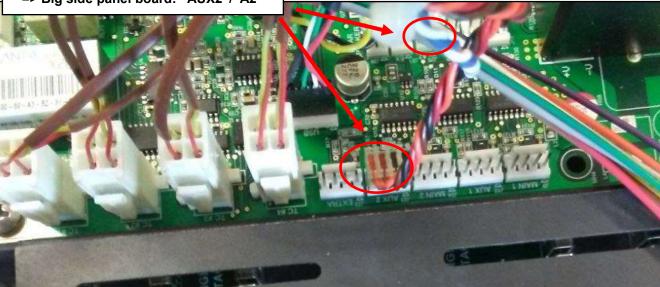



From the **far board on top**, disconnect the red/orange and blue/white braided wires from pin "MAIN1"/"M1". Then connect to "MAIN2"/"M2" on the **big side panel**

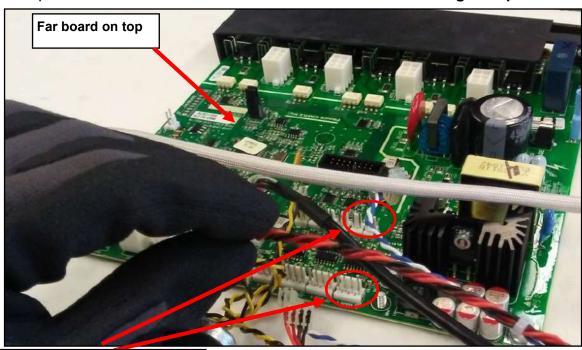

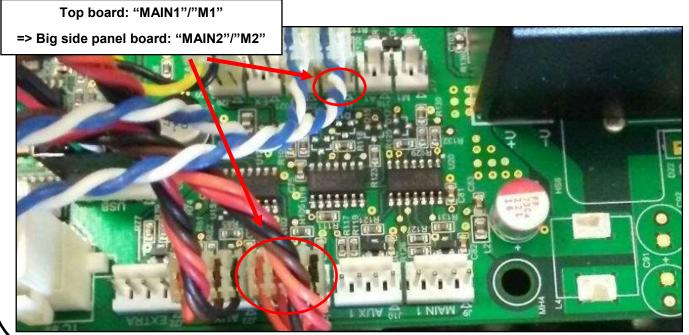



From the **closer board on top**, disconnect the red/orange and blue/white braided wires from pin "AUX1"/"A1". Then connect to "AUX1"/"A1" on the **big side panel**

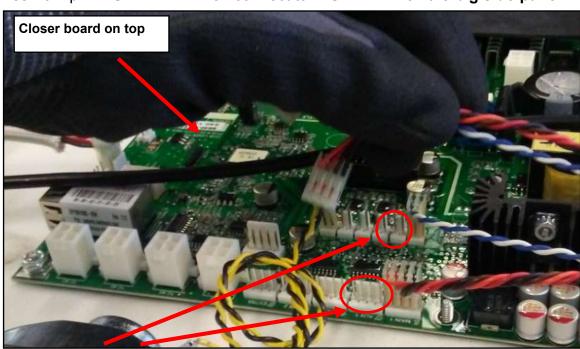


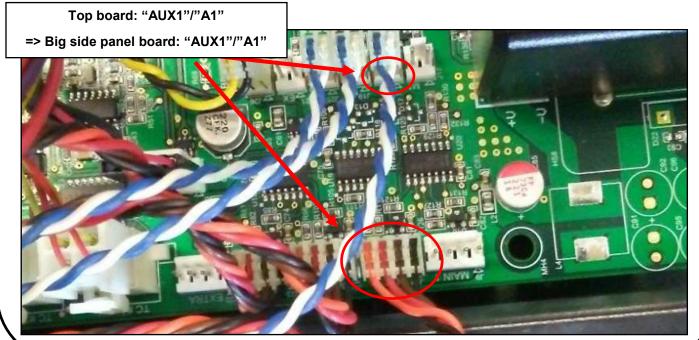


From the **closer board on top**, disconnect the red/orange and blue/white braided wires from pin "MAIN1"/"M1". Then connect to "MAIN1"/"M1" on the **big side panel**

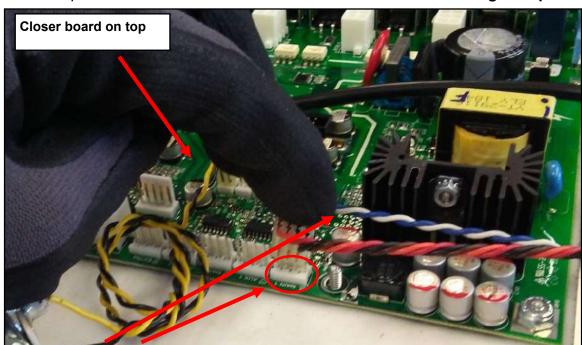

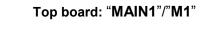


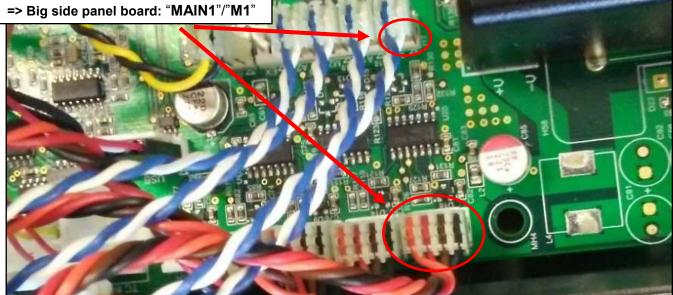

From the closer board on top, disconnect the blue and brown wires, and connect blue to P1 and brown to P2 on the big side panel board.

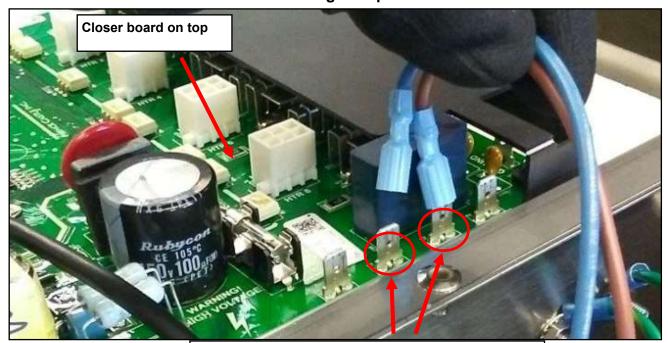

Top board: Brown/blue

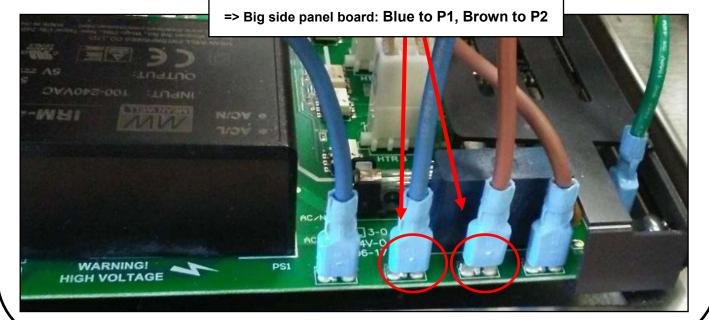


Plug unit into wall outlet, then follow the firmware update instructions on the following page noting areas of high voltage.



Under black plastic guards


Instructions, 3x4 Control Board Upgrade Kit

Extend Holding Bin EHB Series

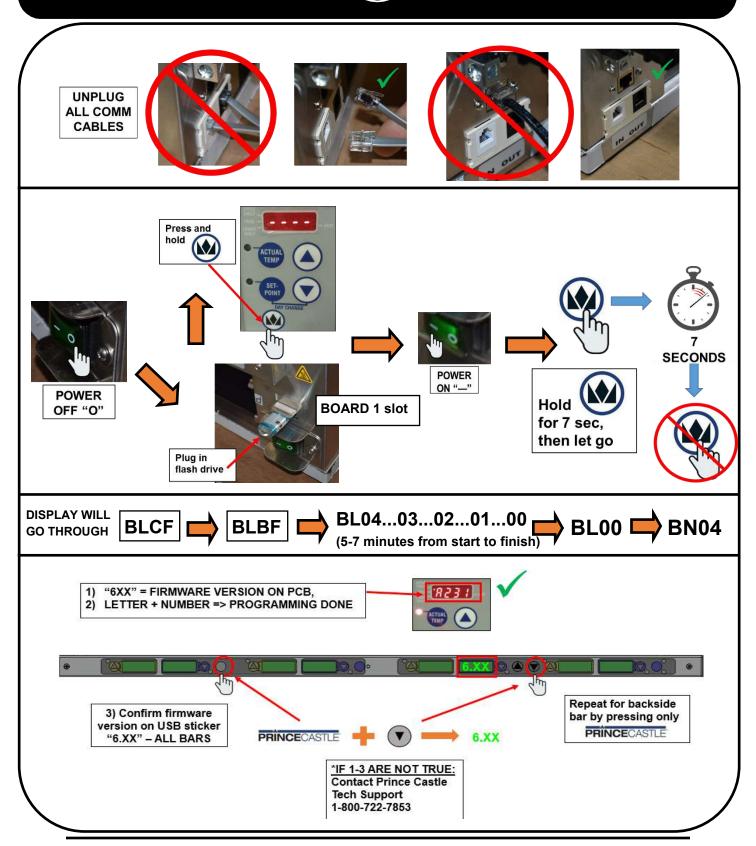

Turn power switch off "O", then unplug from wall outlet; remove USB drive from BOARD 1 slot. Remove old boards on top of unit and discard.

Tuck all wires inside side cavity, re-install top cover and side panel on other side, and re-fasten all screws.

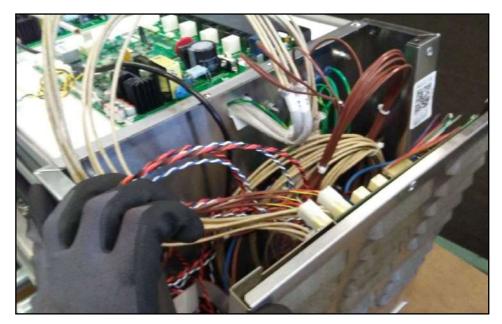



Peel and stick the "MAC #" sticker over the one in the front right corner of the top cover. Then call Chef tech. support to sync the unit online (1.800.547.4266).



