






\*\*\*SLIDE 7 FOR NORMAL BOOT-UP CONDITIONS\*\*\*

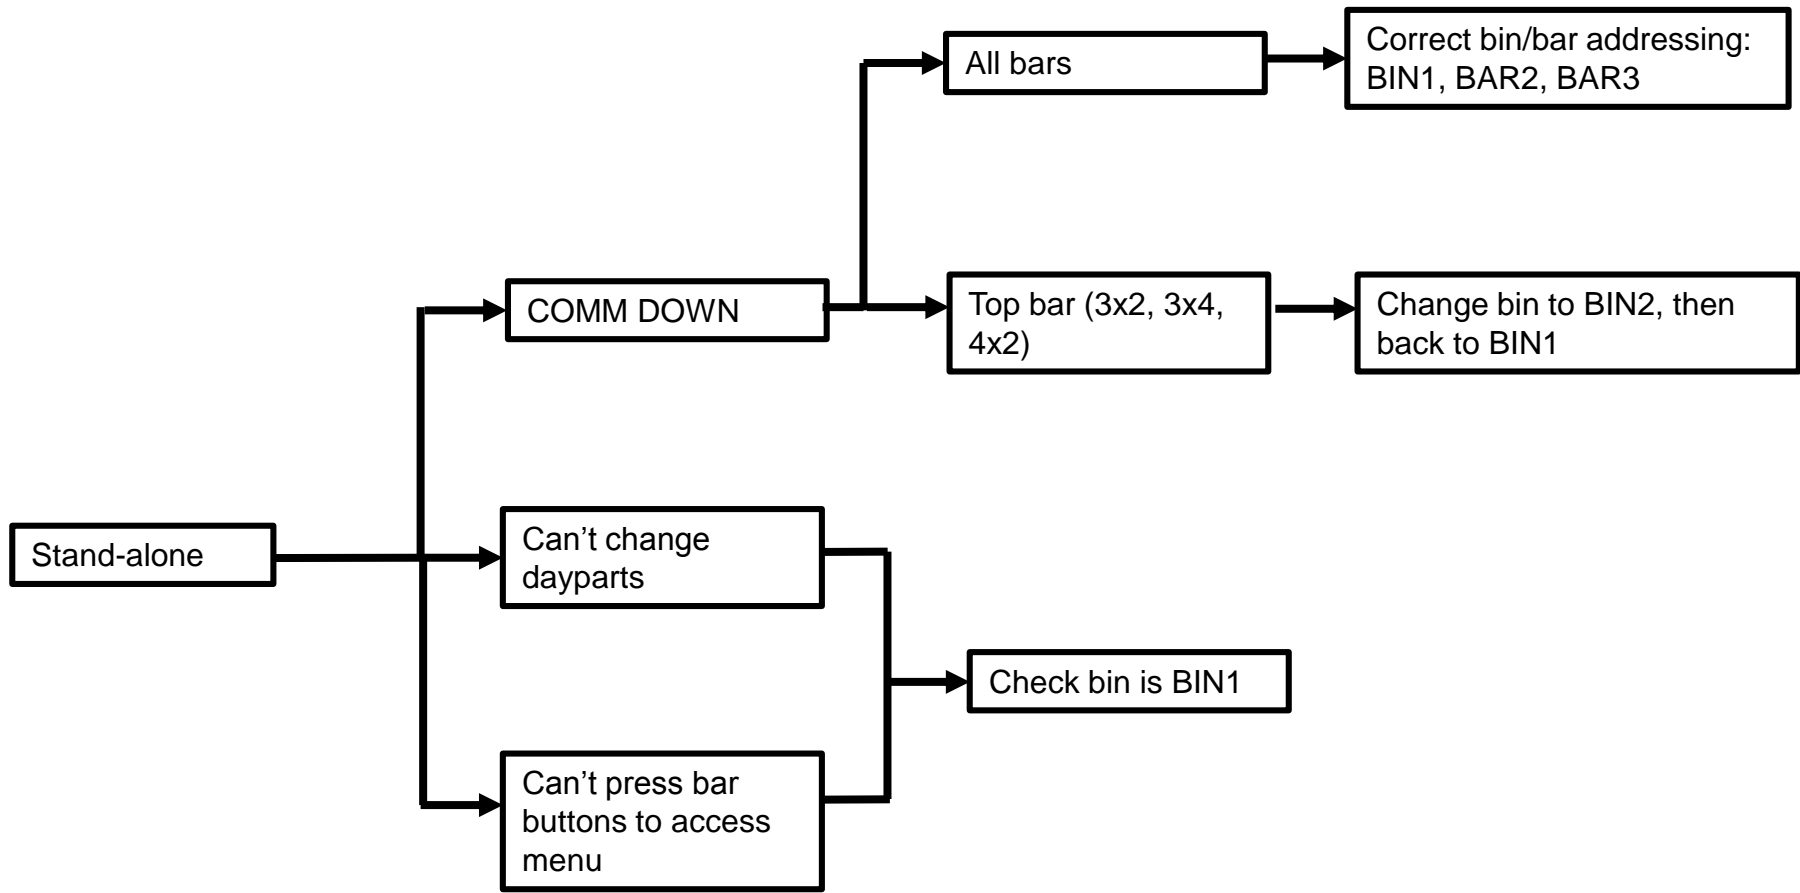

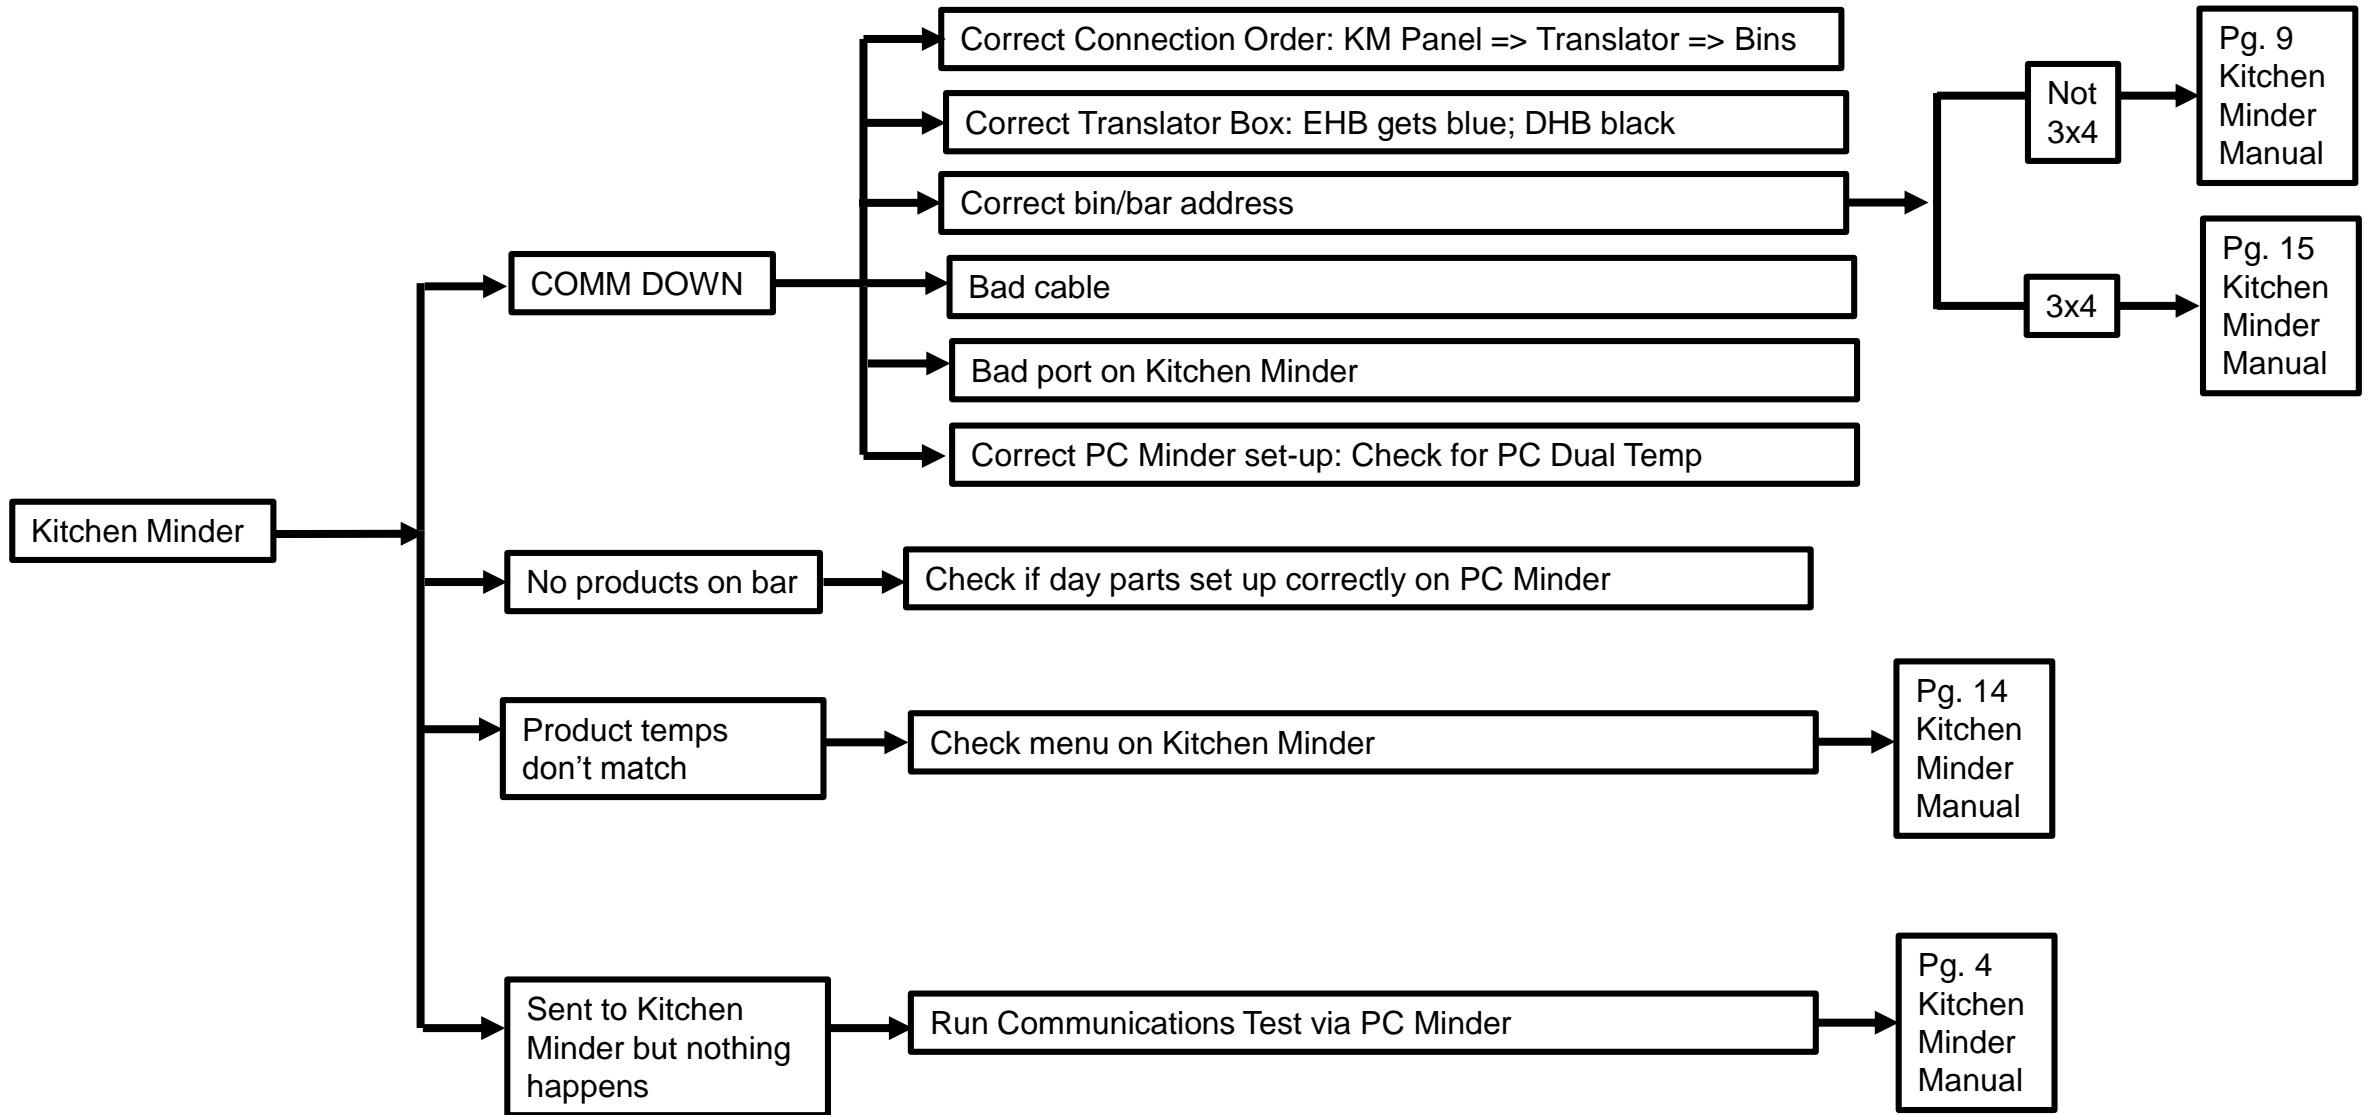

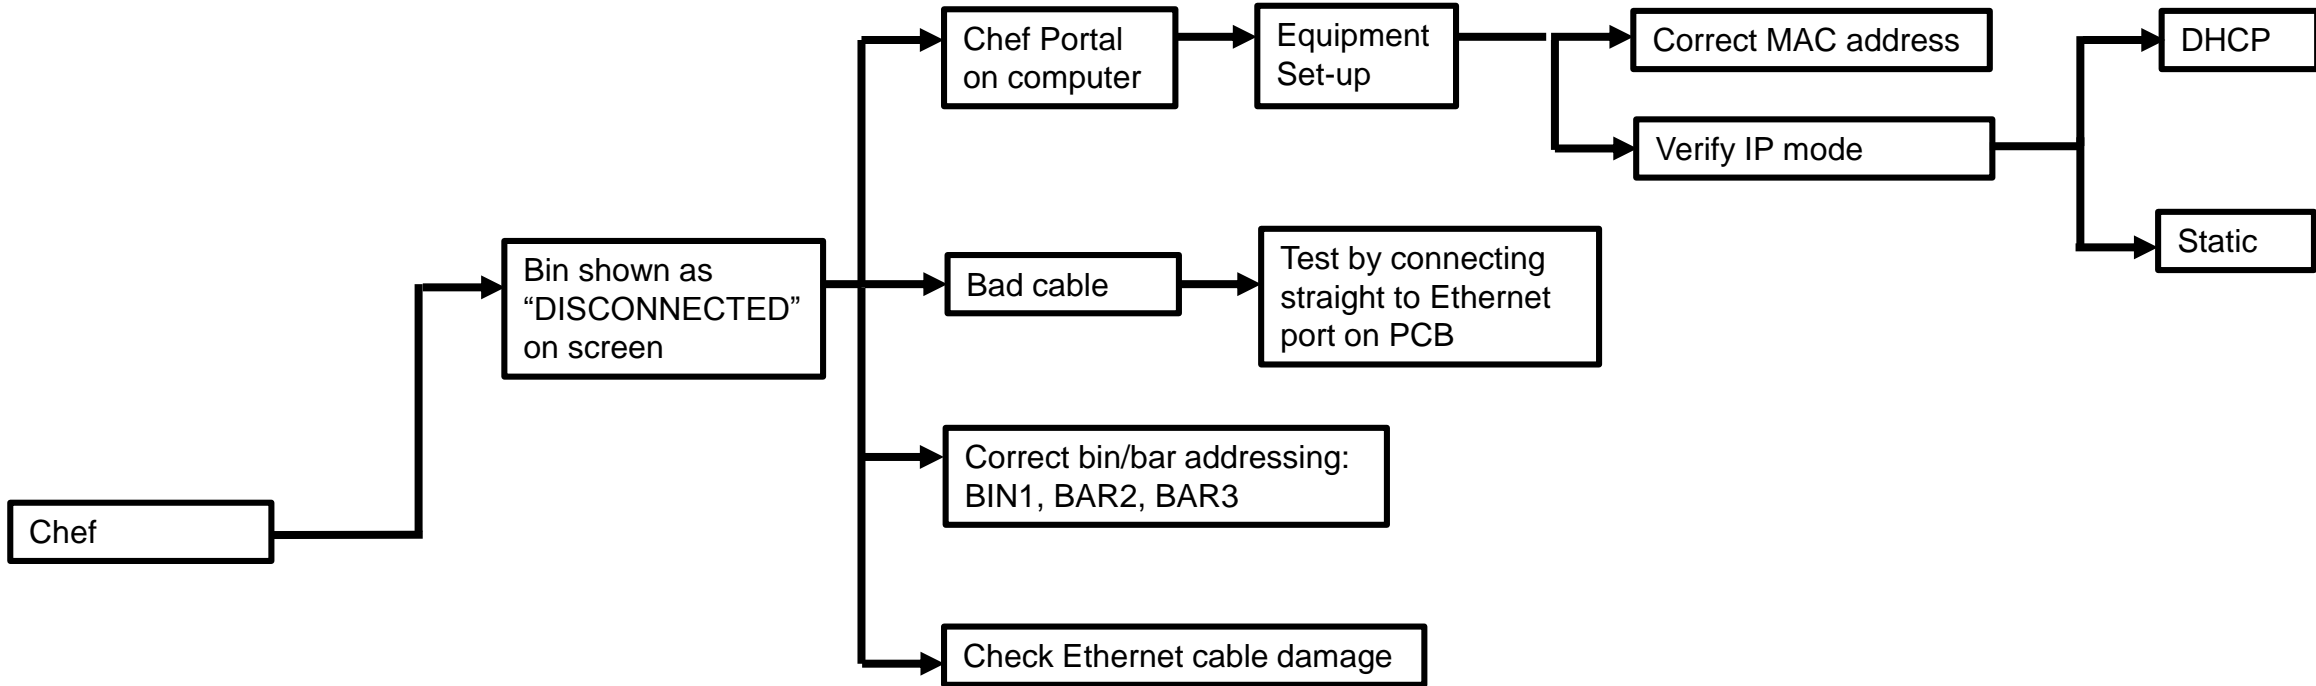

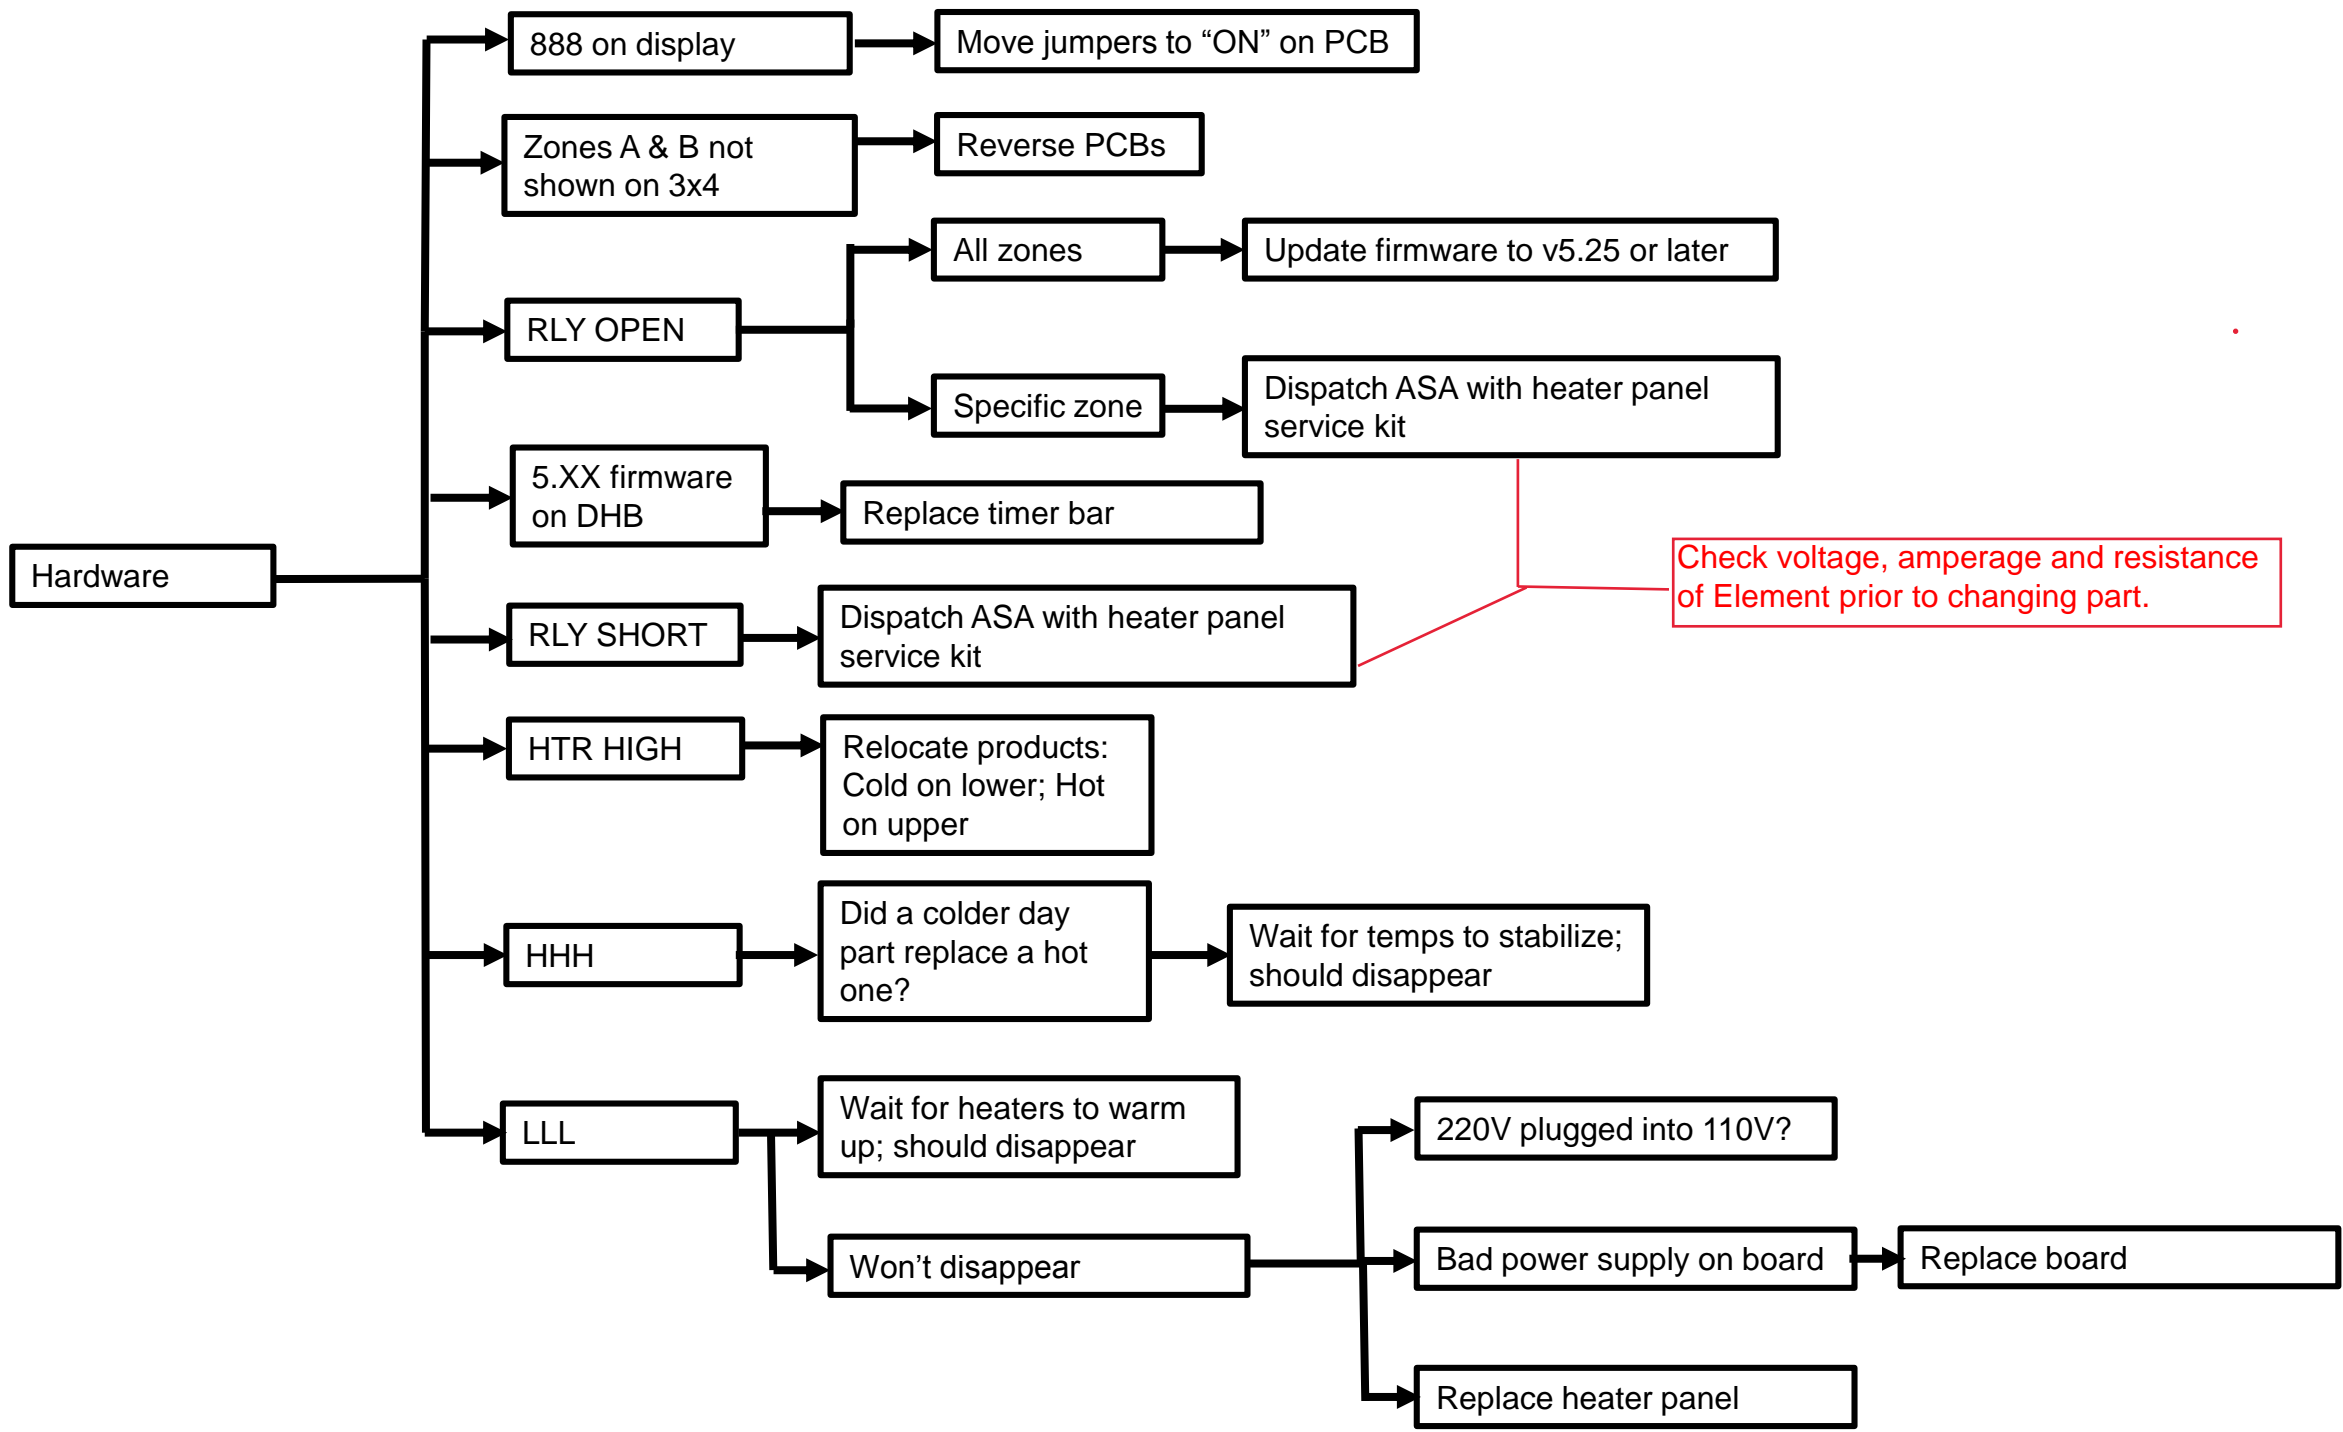

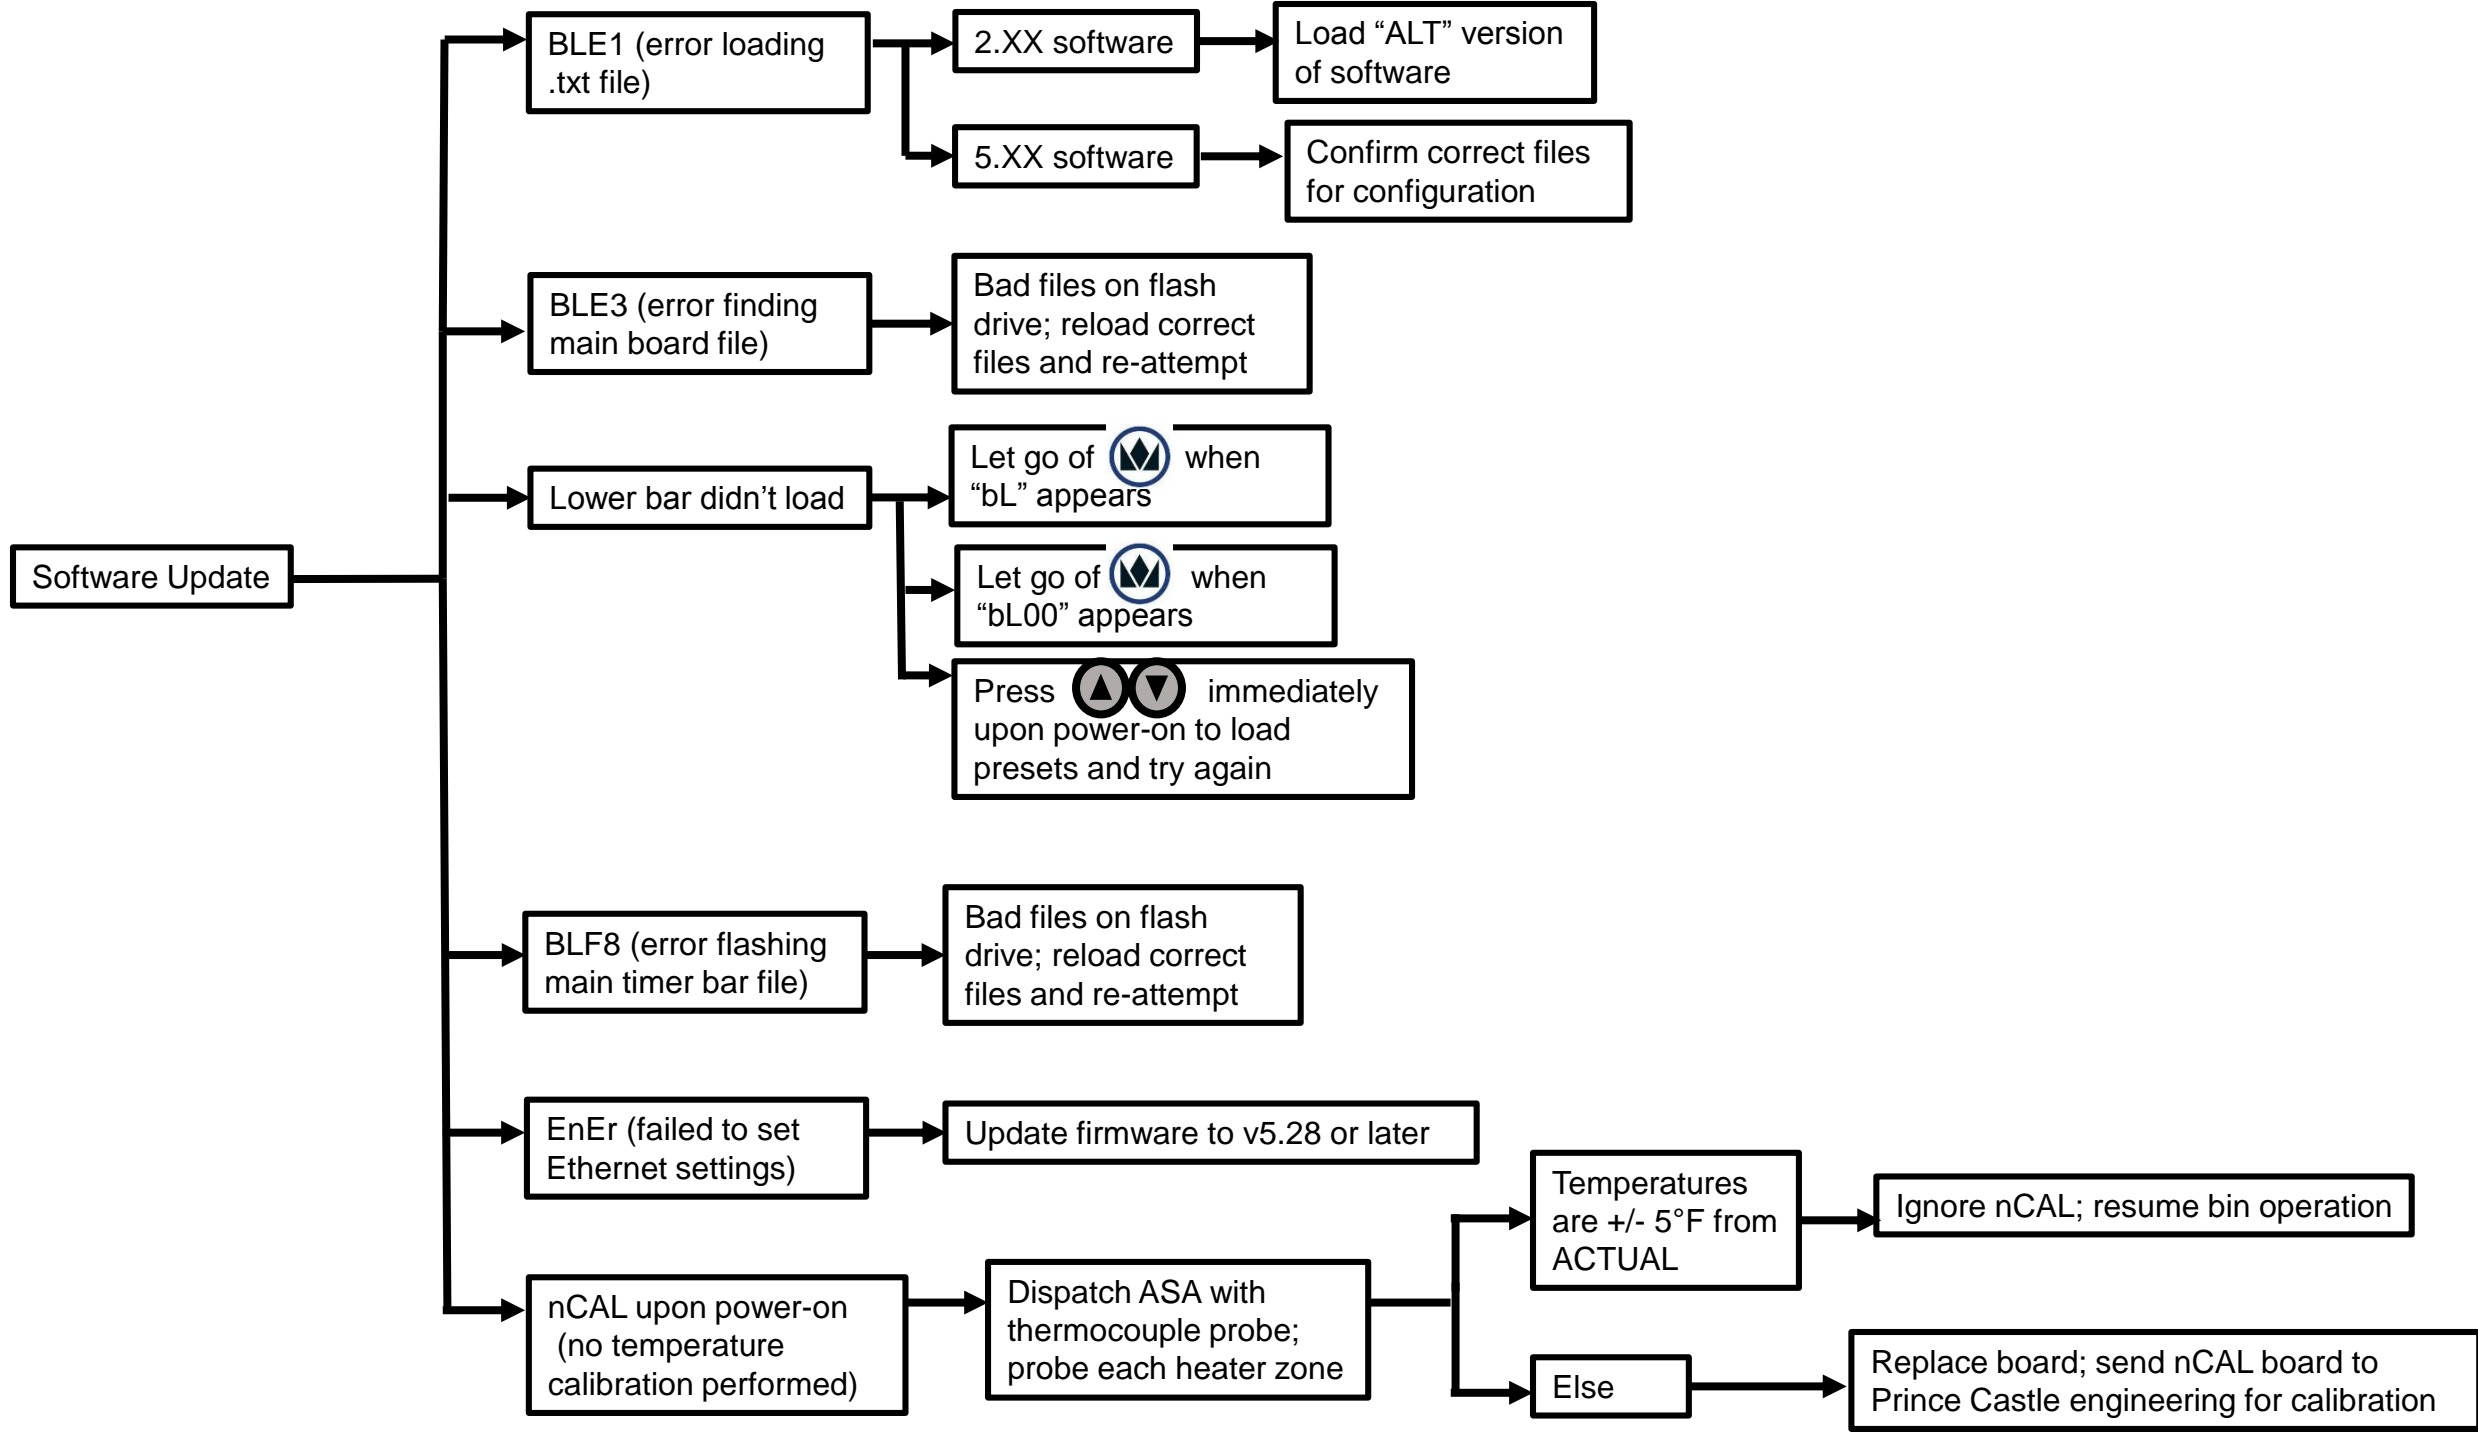

Stand-alone	Kitchen Minder	Chef
EnSP	Zone & Temp (e.g. “.A 220”)	EnSP
PCB software version (v5.29 or later)		En
reUP (if board-bar software mismatch)		PCB software version (v5.29 or later)
Zone & Temp (e.g. “.A 220”)		reUP (if board-bar software mismatch)
		Zone & Temp (e.g. “.A 220”)