



CORNELIUS INC ■ One Cornelius Place ■ Anoka, MN 55303-6234

Telephone (800) 238-3600

Facsimile (612) 422-3246

INSTALLATION INSTRUCTIONS

SIDE MOUNT LEVER KIT ON UF-1 VALVE KIT (P/N 560000970)

Only qualified personnel should perform this procedure.

Side Mount lever refers to the lever used with the new side mount switch.


1. Remove the Cover from the dispensing valve by Lifting front cover up 1/2 inch and pulling forward. Slide rear cover forward 1/2 inch and lift off.
2. Remove the Nozzle by turning counterclockwise and gently pulling down.
3. Remove the Bottom Plate by releasing snap fit clips with your thumbs, (on both sides), and pivot the Bottom Plate down.
4. Remove the old lever and replace with the new side mount lever, P/N 4965.
5. Remove the red and black wires from the old actuating switch. Remove the red wire from the solenoid and discard. Remove the black wire from the molded connector using a needle nose pliers to pinch the connector tab while pulling toward yourself and discard.
6. Install the new switch onto the two posts of the valve body. Connect the red wire to the solenoid terminal and insert the black wire into the molded connector.
7. Install the Bottom Plate by inserting the Bottom Plate rear tabs and then pivot up to secure the snap fits.
8. Install the nozzle by pushing up and turning clockwise.
9. Replace the cover by reversing step 1.



**OLD STYLE LEVER
FOR CENTER
MOUNT SWITCH**



**LEVER FOR SIDE
MOUNT SWITCH,
P/N 4965**

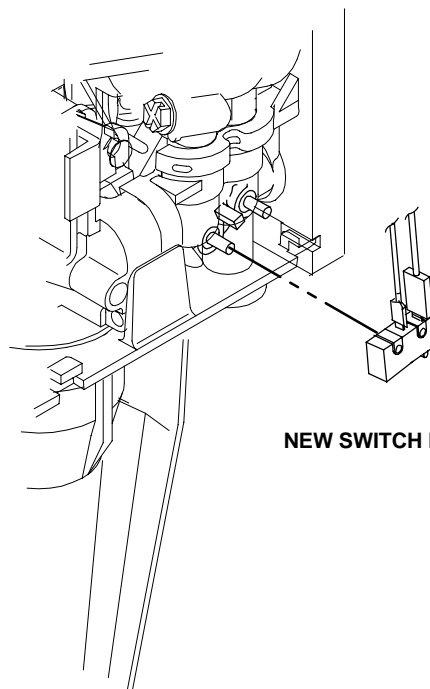

NEW SWITCH LOCATION