





Why	To maintain effectiveness of the Prince Castle MCD DCFT conveyor belt	
Time required	5 minutes to prepare	10 minutes including belts. 5 minutes without belts to complete
Time of day	After close	For 24-hour restaurants: during low volume times
Hazard icons	 Chemicals  Electricity  Hot Surfaces  Equipment Alert	

Tools and supplies



Bucket, clean and sanitized towels



Bucket, soiled towels



Heat Resistant Gloves



Sanitizer Spray Bottle



Solidsense APSC



Approved Degreaser Solution



KAY® Specialty Cleaner & Polish



Three Compartment Sink

INCLUDED IN THIS KIT:

- 1-Starter Cleaning Pack:
 1-Hi-Temp Multi-Use Tool
 1-Hi-Temp Multi-Use Tool Pad



1. Hi-Temp Multi- Use Tool
2. Hi-Temp Multi-Use Tool Pad (10 pack) WRIN: 03574-030
3. Hi-Temp Cleaning Kit – WRIN: 03575-033

Procedure

1 Turn the toaster OFF.

After waiting 15 minutes for unit to cool, put on the heat resistant gloves.




Hot Surfaces

NOTE: Failure to wear heat-resistant gloves while performing this cleaning procedure can result in burns.



2 Remove the main release sheet from the toaster.

- Remove release sheet clip, and release sheet.
- Place on a clean, flat and dry surface.
- Inspect the release sheet for tears, cracks and sticking.
- Replace when necessary.



NOTE: DO NOT fold or crease release sheet or take to the 3-compartment sink to be cleaned.



2 (continued..)

- Spray a clean, sanitizer- soaked towel with Solidsense APSC cleaner solution and use to wipe release sheet clean.
- Clean the entire surface of the release sheet.
- Immediately rinse the sheet with a clean, sanitizer- soaked towel.
- Flip the release sheet over and repeat cleaning instructions.
- Rinse this side of sheet.



Chemicals

Sanitizer solution, Solidsense APSC Cleaner


- Install release sheet, making sure that sheet is centered over platen and the crease in sheet is centered.
- Insert the release sheet over the center bar of the in-feed cover with one end of the sheet in the Crown slot and one end in the Heel slot.
- Position the crease on the release sheet on top of the in-feed chute center bar, making sure that the sheet corners are not curled exposing the platen.
- Check to see that 12.7 mm (1/2") of release sheet extends below each side of the platen.
- Install the Release sheet clip



NOTE: If 12.7 mm (1/2") of the release sheet does not extend below the bottom of the platen, then the sheet is not properly positioned.


NOTE: Make sure release sheet is completely dry before installing.

NOTE: When installing release sheet, you may flip inside-out and use the other side if needed.

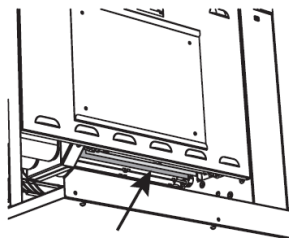

3 Clean conveyor and club belts.

- With power off, remove gloves from hands to unscrew and lift lid and open front conveyor door.
- Put heat-resistant gloves back on to clean.
- Using a sanitized soaked towel clean the club belt.
- Next, spray the sanitizer onto cleaning tool, then gently clean the front main conveyor and club belts.
- Close front door, power unit ON, count 13 seconds to reveal unclean side of belt, power unit OFF, open door and repeat cleaning using the sanitized cleaning tool.
- Close door, power unit ON, count 13 seconds again, power unit OFF, open door and repeat cleaning.
- Wipe down the inner panel of the conveyor access door with a clean, sanitizer-soaked towel sprayed with Solidsense APSC Cleaner.
- Repeat the belt cleaning process for rear main conveyor belt, rear club belt and rear inner panel.

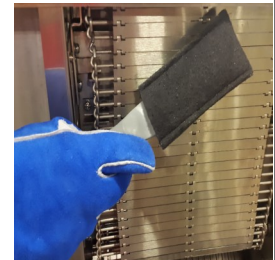

Chemicals

Sanitizer solution, Solidsense APSC Cleaner

- Close the conveyor access door and secure.
- Install the Infeed Cover
- Re-tighten top cover screws.



4 Remove wire bun chute and clean.

- Lift chute at an angle, lifting rear of chute and then pulling chute forward out of toaster.
- Spray a clean, sanitizer-soaked towel with Solidsense APSC Cleaner.
- Use the towel to clean the wire bun chute.
- Use the towel to clean all exterior areas of the toaster.




Chemicals

Sanitizer solution,
Solidsense APSC Cleaner

5 Clean landing zone and reinstall wire bun chute.


- Spray a clean, sanitizer-soaked towel with Solidsense APSC Cleaner.
- Use the towel to clean the Pick-Up Zone.
- Spray all areas of the Pick-Up Zone with SolidSense Sanitizer and allow to air dry.

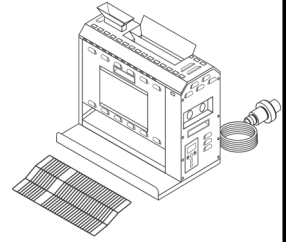

Chemicals

Solidsense APSC Cleaner

- Install wire bun chute by sliding the wire bun chute over the landing zone and into the toaster.
- Position the chute so that the rear of the chute is secured by 2 posts at the rear of the toaster.

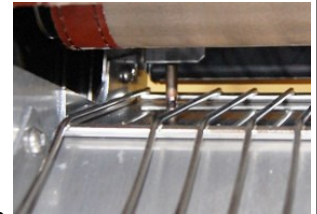

NOTE: Front edge of the wire bun chute should be positioned at the edge of the toaster landing zone.

Proper installation of wire bun chute is shown above right.

Improper installation of wire bun chute is shown below right.



6 Clean exterior of the toaster.

- Clean exterior of toaster unit and all parts with a clean, sanitizer-soaked towel sprayed with Solidsense APSC Cleaner.
- Rinse exterior of unit using a clean, damp sanitizer-soaked towel.

NOTE: If streaking occurs, spray a paper towel with KAY Specialty Cleaner & Polish and wipe down to polish the exterior of the equipment.



Chemicals
Sanitizer solution,
Solidsense APSC Cleaner

- ### 7 Turn the toaster ON. Allow the toaster to warm up. The toaster is now ready to resume use.

