


Part Identification

IMPORTANT: TURN OFF POWER SWITCH AND DISCONNECT FROM POWER

ITEMS REQUIRED FOR REMOVAL: (1) NEEDLE NOSE PLIERS



ITEMS REQUIRED FOR INSTALLATION: (1) PHILLIPS HEAD SCREW DRIVER SIZE #1, (1) 353-1276DS KIT

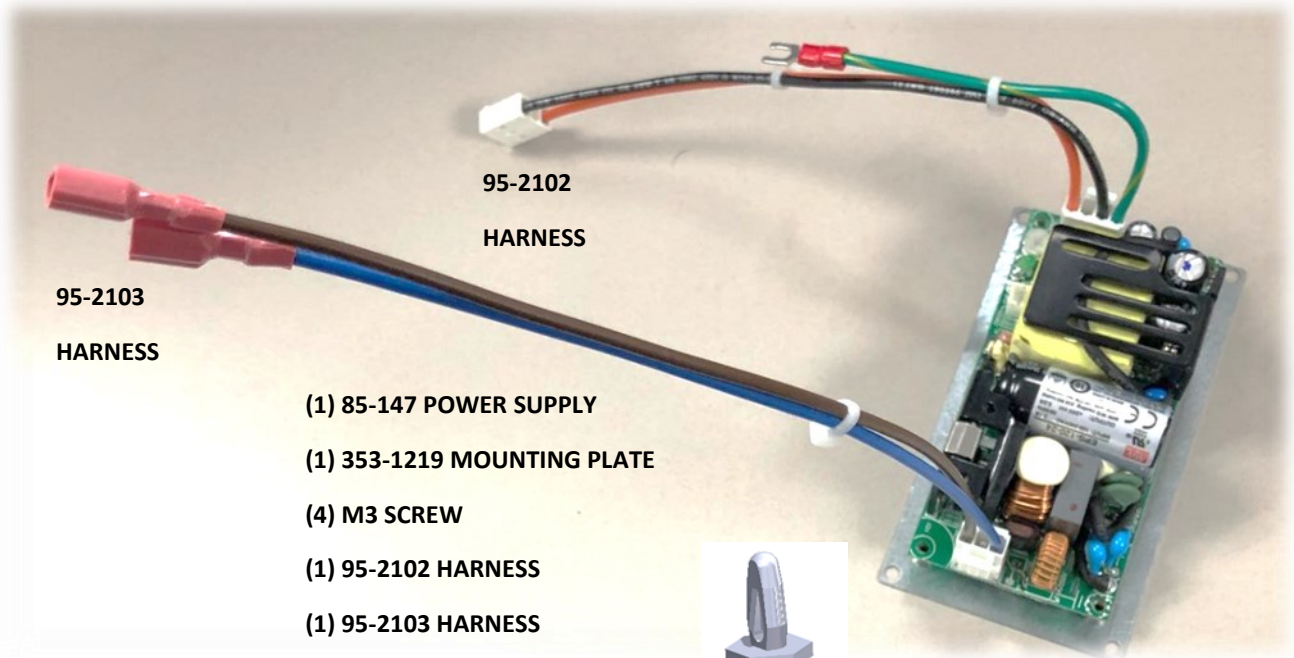

95-2102
HARNESS

95-2103
HARNESS

- (1) 85-147 POWER SUPPLY
- (1) 353-1219 MOUNTING PLATE
- (4) M3 SCREW
- (1) 95-2102 HARNESS
- (1) 95-2103 HARNESS
- (4) 73-232 #6-32 NUT



XP POWER SUPPLY REMOVAL INSTRUCTIONS:

USE ITEMS REQUIRED TO REMOVE PLASTIC STANDOFFS ATTACHING POWER SUPPLY TO SHEET METAL. UNPLUG HARNESES THAT ARE PLUGGED INTO POWER SUPPLY. TAKE NOTE OF WHERE THEY ARE UNPLUGGED FROM. REMOVE POWER SUPPLY FROM TOASTER.

MEANWELL POWER SUPPLY INSTALLATION INSTRUCTIONS:

INSTALL MOUNTING PLATE ONTO FOUR (4) STUDS IN THE SHEET METAL, USE FOUR (4) NUTS PROVIDED IN KIT. PLUG IN 95-2102 INTO PCB; PLUG IN 95-2103 INTO TERMINAL BLOCK.